


Installation Instructions


FloorMuffler® LVT UltraSeal

1

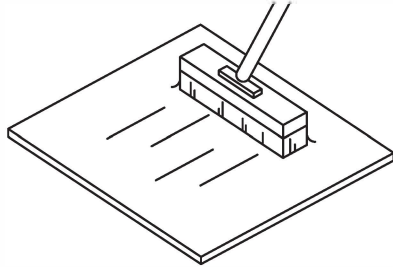


Make sure the subfloor is structurally sound, level and is free of dust and debris. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must be dry with moisture emission rates that do not exceed 3lbs. per 1000 square feet per 24 hours as measured by the Anhydrous Calcium Chloride Test.

2

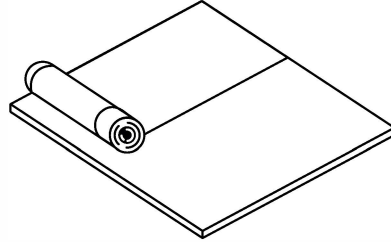


Start in a corner with tape strip side next to wall and overlapping film toward the open room. Install the **FloorMuffler® LVT UltraSeal** (film side down) parallel to the wall in the opposite direction as you plan to install the flooring planks. When installing the **FloorMuffler® LVT UltraSeal**, leave at least 2" going up the wall.

3

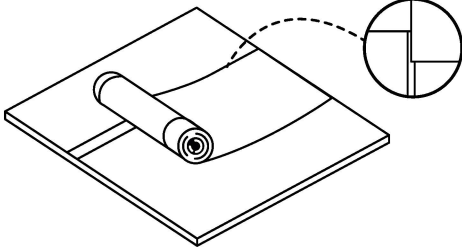


Be sure to unfold the film, extending it 3" from the foam. Roll out the next roll of **FloorMuffler® LVT UltraSeal** in the same manner, making sure that the foam seams are butted together. Be sure to overlap only the moisture barrier lip and not the foam pad.

4

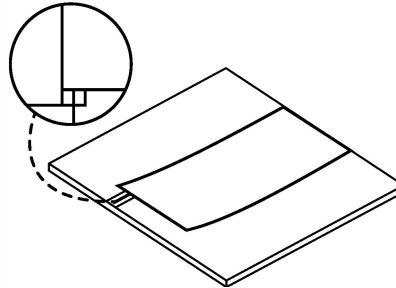

Remove the adhesive liner and adhere the foam to the film overlap.

5

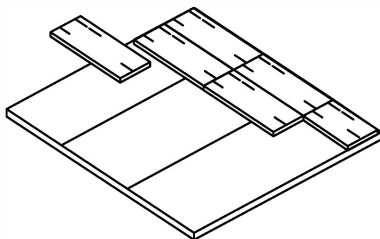

Install the flooring per manufacturer's instructions.

ultraSeal
floorMuffler® LVT

Visit us at
floormuffler.com

